

5. Provide a name for the cart, choose the desired weight display format (e.g., 10 lb, 20 lb), and tap *Add+* to finish.
6. Your device will now appear under *“Grain Carts”* with a check mark, indicating successful pairing.
7. Once connected, the LED on the device will begin flashing twice and a link icon will appear above the *Clear* button on the *Display* tab.

*This device complies with part 15 of the FCC rules and with Canadian ICES-003 and RSS-210 rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

For additional support, visit the  
Serial Link section at  
[support.agrimatics.com](http://support.agrimatics.com).

Visit our website for a complete line of  
products and accessories.



## Getting Started Guide

A step-by-step guide to installation and initial set-up for your Serial Link



[www.agrimatics.com](http://www.agrimatics.com)  
101-116 Research Drive  
Saskatoon, SK, Canada S7N 3R3  
1-888-241-7216

Thank you for purchasing

# SERIAL LINK

## STEP 1: DEVICE INSTALLATION



Mount the Serial Link device to the front of the grain cart with its connectors pointing sideways, preferably protected from direct exposure to the elements. Connect the Serial Link 12-volt power cable to the device.

**WARNING:** Vehicle battery connection shall be in *accordance* with all vehicle safety instructions including 4A SLOW ACTING protective fusing with minimum 20 AWG wiring.

Connect the Serial Link interface cable from the device to your LED display. Secure any excess cable.

## STEP 2: DOWNLOAD THE APP

Pairing, connecting, and configuring the Serial Link settings are all handled in the Libra Harvest app. Download the app from the App Store or Google Play by searching for “Libra Harvest.”

You will be prompted to Join or Create an Agrimatics Cloud account when opening the app for the first time. For more information, visit the Libra Harvest section at [support.agrimatics.com](http://support.agrimatics.com).



### STEP 3: PAIRING SERIAL LINK

If you have already paired a grain cart to your app:

1. Bring your mobile device to the Serial Link device and launch the Libra Harvest app, ensuring Bluetooth is enabled.
2. Select the *Settings* tab inside the app. For the tractor's mobile device, ensure *Primary Display* is selected.

3. Tap the gear icon next to your grain cart.
4. Select your Serial Link device from the *Available Devices* list and ensure that your Libra Cart device is already selected.
5. Once paired, your device will now appear with a check mark. Tap *Done*.
6. Once connected, the LED on the device will begin flashing twice and a link icon will appear above the *Clear* button on the *Display* tab.

If you have not paired a grain cart to your app:

1. Bring your mobile device to the Libra Cart and Serial Link devices and launch the Libra Harvest app, ensuring Bluetooth is enabled.
2. Select the *Settings* tab inside the app. For the tractor's mobile device, ensure *Primary Display* is selected.
3. Tap *Add Grain Cart* to add your new Libra Cart device to the app and wait for the scan to finish.
4. Select your Libra Cart and Serial Link devices from the *Available Devices* list.